

# High energy, single-mode, all-solid-state and tunable UV laser transmitter

**Narasimha S. Prasad<sup>a</sup>, Upendra N. Singh<sup>a</sup>, Floyd Hovis<sup>b</sup>**

**<sup>a</sup>NASA Langley Research Center,  
5 N. Dryden St., MS 468, Hampton, VA 23681**

**<sup>b</sup>Fibertek, Inc.,  
510 Herndon Parkway, Herndon, VA 20170**

## **CLEO/Europe-IQEC Conference**

**June 17-22, 2007  
World of Photonics Congress 2007 in the International  
Congress Centre Munich, Germany**

**Paper Session Code: CA5-4-TUE 15:30**



# Laser Risk Reduction Program (LRRP)

- **NASA began Laser Risk Reduction Program (LRRP) in 2002 to develop reliable, robust, and compact laser technologies for lidar applications from space based platforms**
  - **Program:** **Joint operation of Langley Research Center and Goddard Space Flight Center**
  - **Goal:** **1 micron and 2 micron lasers and wavelength conversion technology**
  - **Applications:** **Four Lidar Techniques-altimetry, Doppler, Differential Absorption Lidar (DIAL), backscatter lidar**
  - **Measurements:** **6 priority Earth Science measurements:**  
**(1) Surface and ice mapping, (b) Horizontal vector wind profiles (3) Carbon-di-oxide (CO<sub>2</sub>) profiles (4) Ozone (O<sub>3</sub>) profiles(5) Aerosol/clouds and (6) River currents**





# UV Task Objectives

- The objective of the UV Task is to develop an efficient, all-solid-state, diode pumped, conductively cooled, single longitudinal mode and high energy 1-micron to UV wavelength conversion technology
- The emphasis is to generate UV wavelengths of 308 nm and 320 nm for ozone sensing using DIfferential Absorption Lidar (DIAL) technique from space
- Performance Goals:
  - Output energy at UV wavelengths:  $\geq 200$  mJ
  - Pulsewidth: 10 - 25 ns
  - PRF: 50 Hz
- High pulse energy allows enhanced performance during strong daylight conditions
- UV Task is a collaborative effort among Sandia National Labs, Fibertek, and NASA LaRC



# Technical Approach to UV generation

- **Basic Scheme comprises of a Nd:YAG laser pumped nonlinear optics based converter comprising of a second harmonic generation (SHG), optical parametric oscillator, (OPO) and sum frequency generation (SFG) processes**

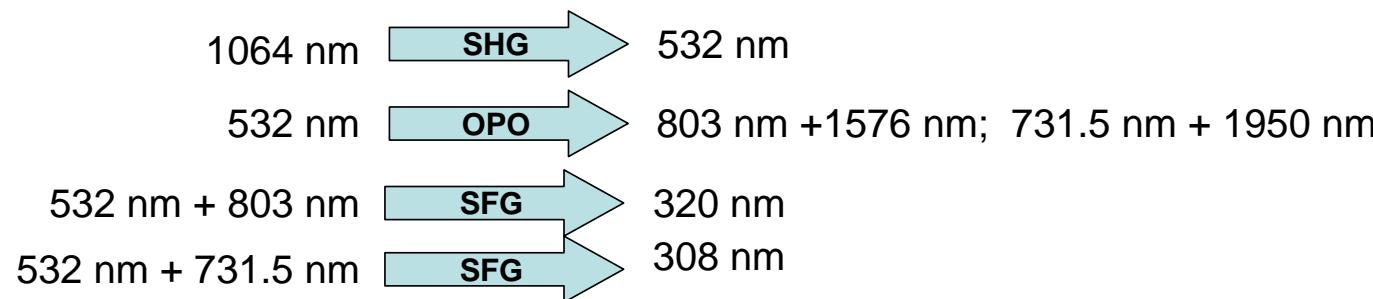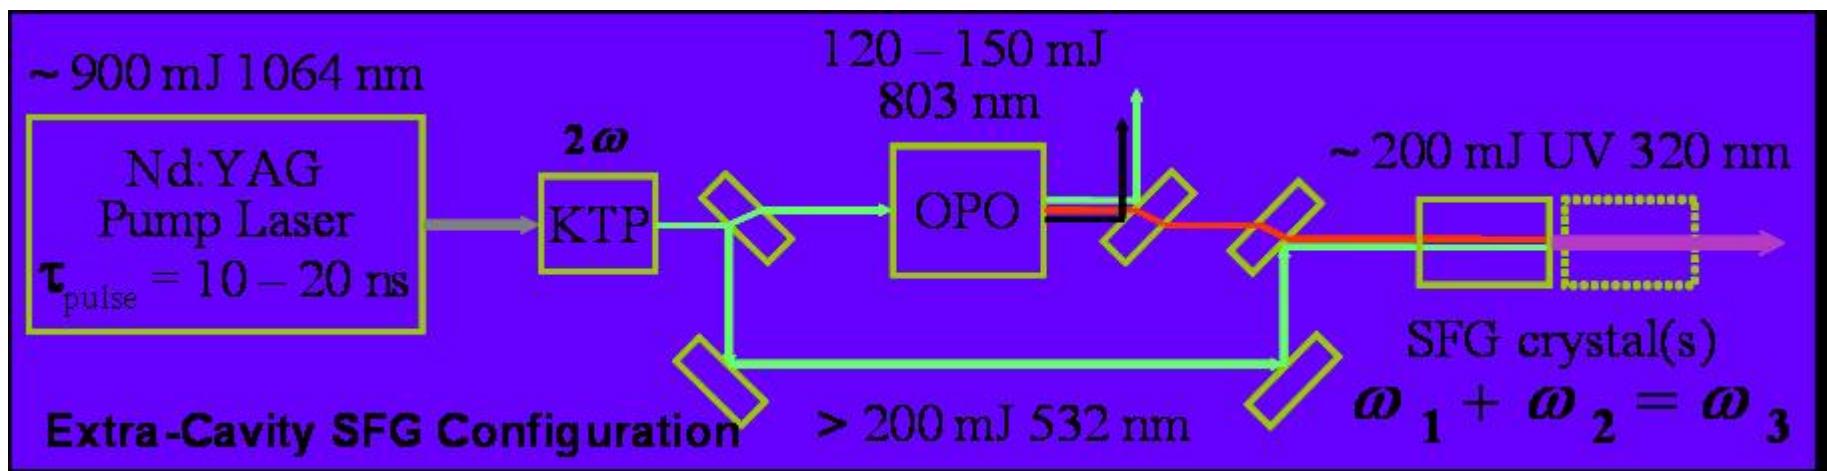



# UV Wavelength Conversion

## -Experimental Results-

- The nonlinear optics based technology to efficiently generate UV wavelengths has been established using a flash lamp pumped Nd:YAG laser
- The scheme utilizes a novel (Rotated Image Singly Resonant Twisted RectAngle) RISTRA OPO to generate 803 and 731.5 nm wavelengths pumped using a 532 nm pump source
- A type-I BBO crystal is used in the RISTRA OPO and a LBO crystal is used for SFG
- Single mode operation is obtained through pulsed seeding technique with temporally matched pump and idler pulse profile
- Pulse idler seeding is obtained by a tunable laser diode and RISTRA OPO in tandem as seed sources
- **For 803 nm**
  - A small or low energy RISTRA OPO that is locked by Pound-Drever-Hall (PDH) technique and seeded by New Focus tunable diode laser operating at 803 nm
  - The 1.5x scaled big RISTRA OPO that is pulse seeded at 1576 nm from the small OPO and locked by energy stabilization technique



# Latest Results on the UV conversion

- State-of-the-art conversion efficiencies have been demonstrated using a flash lamp pumped Nd:YAG laser with a round top-hat profile

- Greater than 90 % pump depletion obtained
- At 320 nm, >200 mJ extra cavity SFG with good beam Quality
  - IR to UV efficiency > 21% (27% for 1 mJ seed)
- At 320 nm , up to 160 mJ intra-cavity SFG
  - IR to UV efficiency up to 24%
- Fluence  $\geq 1 \text{ J/cm}^2$  for most beams



**RISTRA OPO Module**



# Solid-State Nd:YAG Pump laser

---

- For future space applications, an all solid-state, diode pumped Nd:YAG pump laser has been developed in collaboration with Fibertek, Inc.
  - The pump laser is an upgrade of  $\sim 300$  mJ/pulse Nd:YAG laser developed under NASA funded ATIP program
  - Two amplifiers have been added to the NASA ATIP laser to achieve up to 1.2 J/pulse



# Nd:YAG Pump Laser

## -Summary of Technical Approach-


### An all solid-state diode-pumped laser transmitter featuring:

- **Injection seeded ring laser** **Improves emission brightness (M<sup>2</sup>)**
- **Diode-pumped zigzag slab amplifiers** **Robust and efficient design for use in space**
- **Advanced E-O phase modulator material** **Allows high frequency cavity modulation for improved stability injection seeding**
- **Alignment insensitive / boresight stable 1.0  $\mu$ m cavity and optical bench** **Stable and reliable operation over environment**
- **Conduction cooled** **Eliminates circulating liquids w/in cavity**
- **Space-qualifiable component designs** **Establishes a path to a space-based mission**




# Single Frequency Laser Ring Laser Design

## Optical Schematic

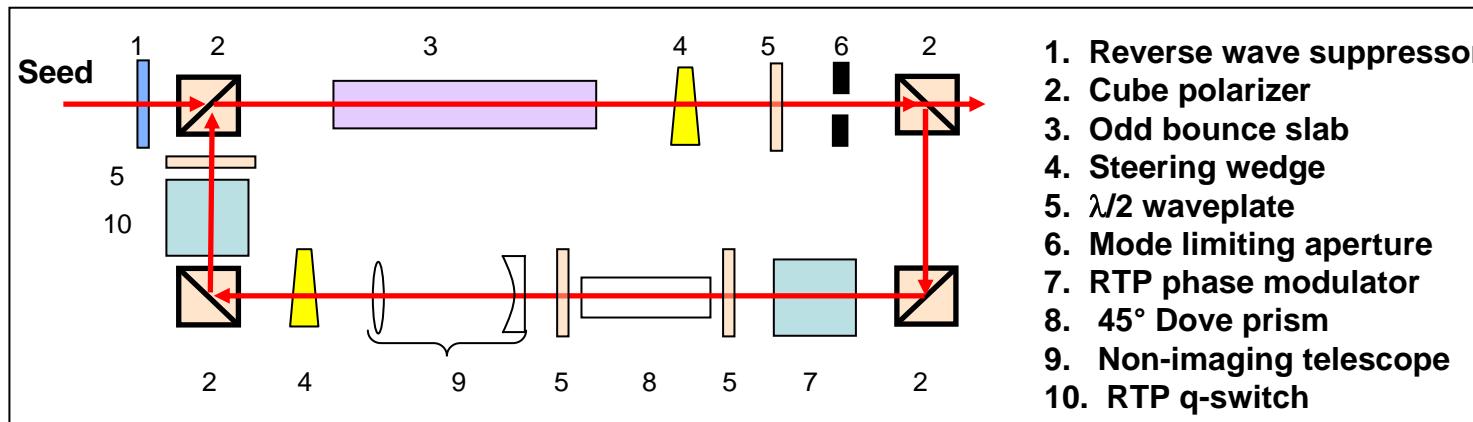

## Final Zerodur Optical Bench (12cm x 32cm)

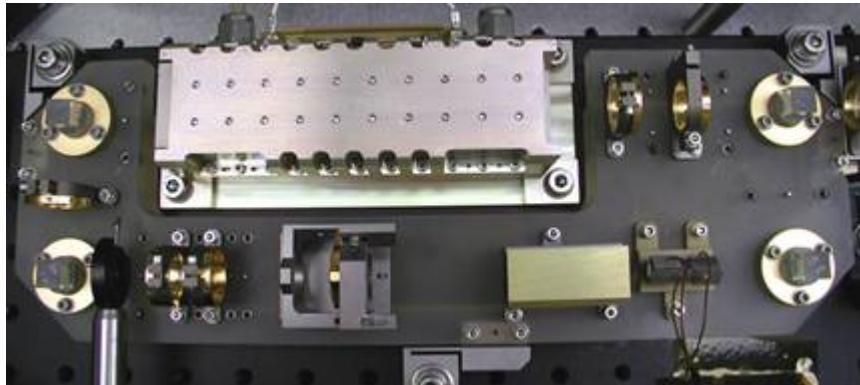

## Design Features


- Near stable operation allows trading beam quality against output energy by appropriate choice of mode limiting aperture
  - 30 mJ TEM<sub>00</sub>, M<sup>2</sup> = 1.2 at 50 Hz
  - 30 mJ TEM<sub>00</sub>, M<sup>2</sup> = 1.3 at 100 Hz
  - 50 mJ square supergaussian, M<sup>2</sup> = 1.4 at 50 Hz
- Injection seeding using an RTP phase modulator provides reduced sensitivity to high frequency vibration
- PZT stabilization of cavity length reduces sensitivities to thermal fluctuations
- Zerodur optical bench results in high alignment and boresight stability




# Amplifier Design Configuration

3 Bounces-Rectangular Shape-2 sided pumping in the TIR axis,  
2 sided conduction cooling, Pump faces uncoated (~10%loss)

## 2-Sided Pumped & Cooled Amplifier

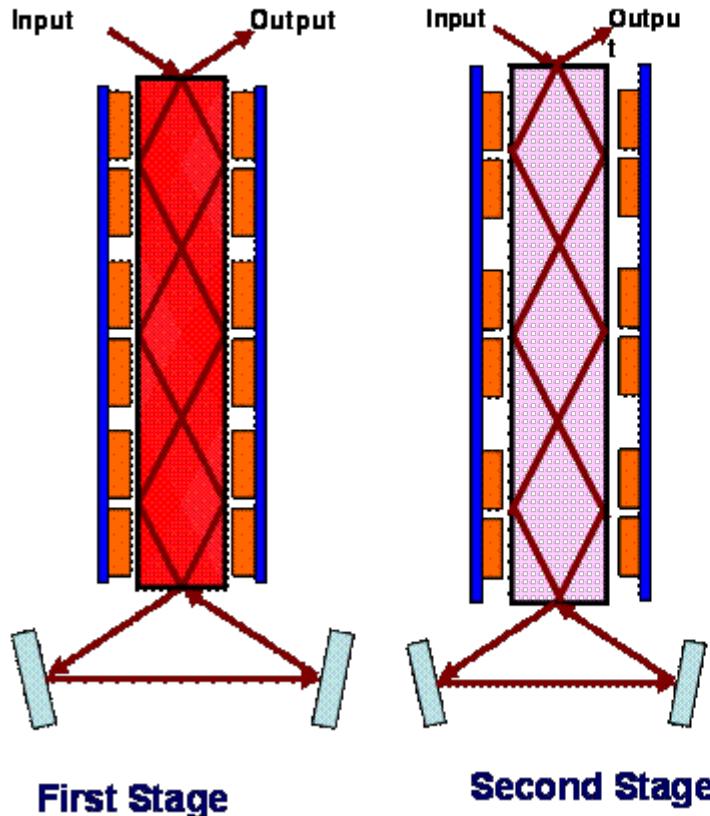

## Prototype Two-Sided Pumped and Cooled Head Design

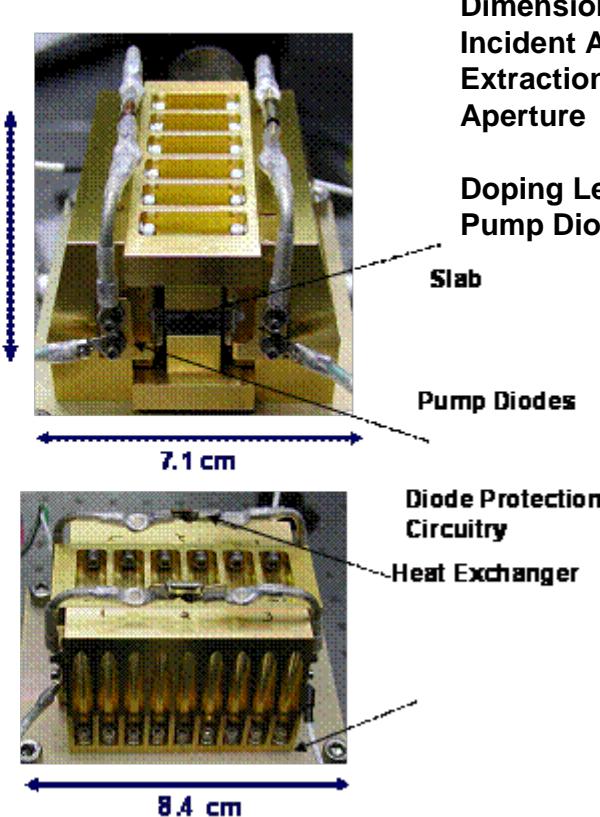


Dimensions  
Incident Angle  
Extraction  
Aperture  
  
Doping Level  
Pump Diodes

6.8 x 13.0 x 75.3 mm<sup>3</sup>  
Near Brewster (57)  
100% at full aperture  
11.5 x 6.8 mm<sup>2</sup> (*internal*)  
7.1 x 6.8 mm<sup>2</sup> (*external*)  
0.5 ± 0.1 % Nd<sup>3+</sup>  
192 ea. 50 watt QCW bars  
(12 ea. 16 bar arrays)




# Final System Configuration

Optical layout

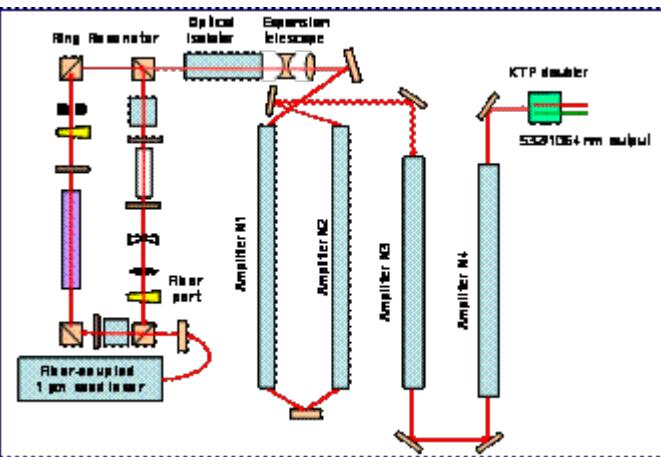

Breadboard layout

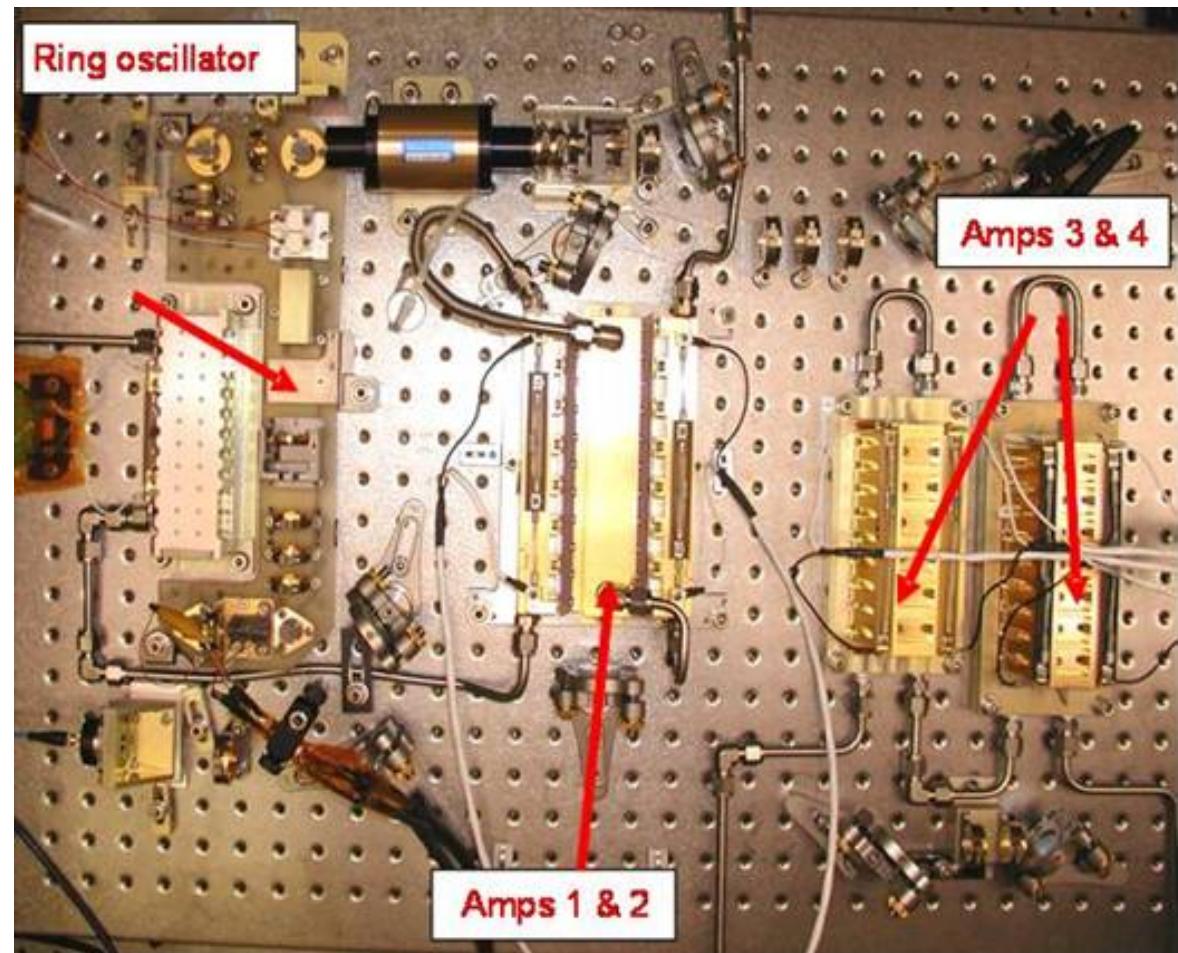

Diode Bars and slabs are conductively coupled to the heat sink.

For space applications, one can use heat pipes or radiators



# Amplifier Upgrade

## 2-Sided Pumped & Cooled Amplifier

### Dual Stage Amplifier Modeling


Model is based on Franz-Nodvic result for a amplifying a square (in time) pulse

Model includes all key parameters explicitly

- Number of pump diodes (192)
- Peak diode power (75 W)
- Diode pulse width
- Input oscillator pulse energy (60 mJ)
- Input beam diameter
- Gain path length in amp
- Slab volume

Accounts for reduced gain for second pass

1 J per pulse output is predicted for 210  $\mu$ s diode pump pulses

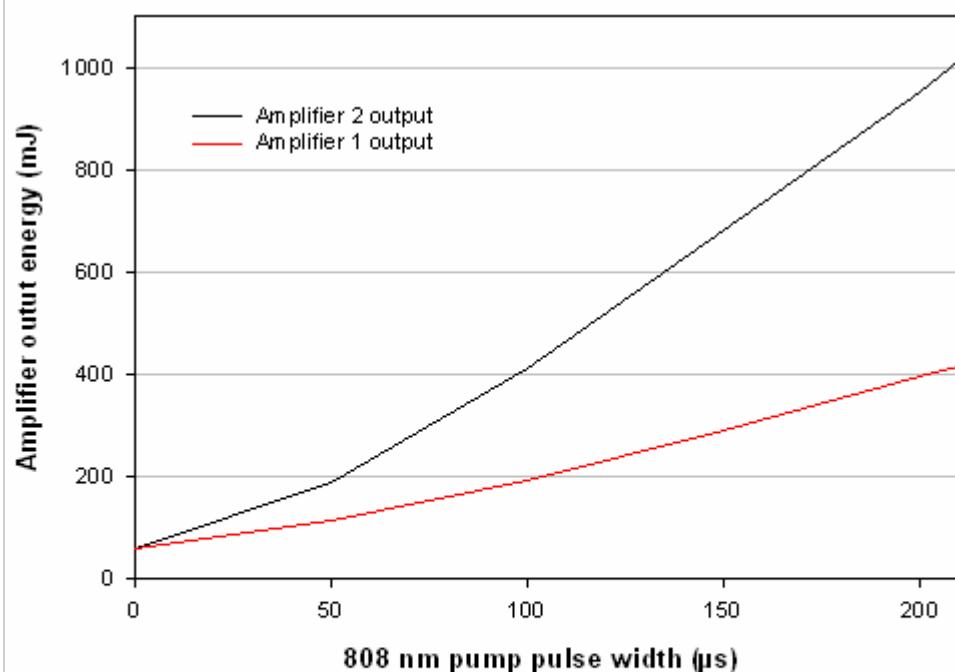


**Modeled output of dual 2-sided pumped and cooled amplifiers for 60 mJ input to first stage**

**Dual 2-sided pumped amplifiers meet the requirements of most space-based direct detection wind lidars designs**



# Pump Laser Performance

- The laser is now operational at 50 Hz PRF with maximum pulsewidths around 22 ns
- The output beam profile is rectangular super gaussian

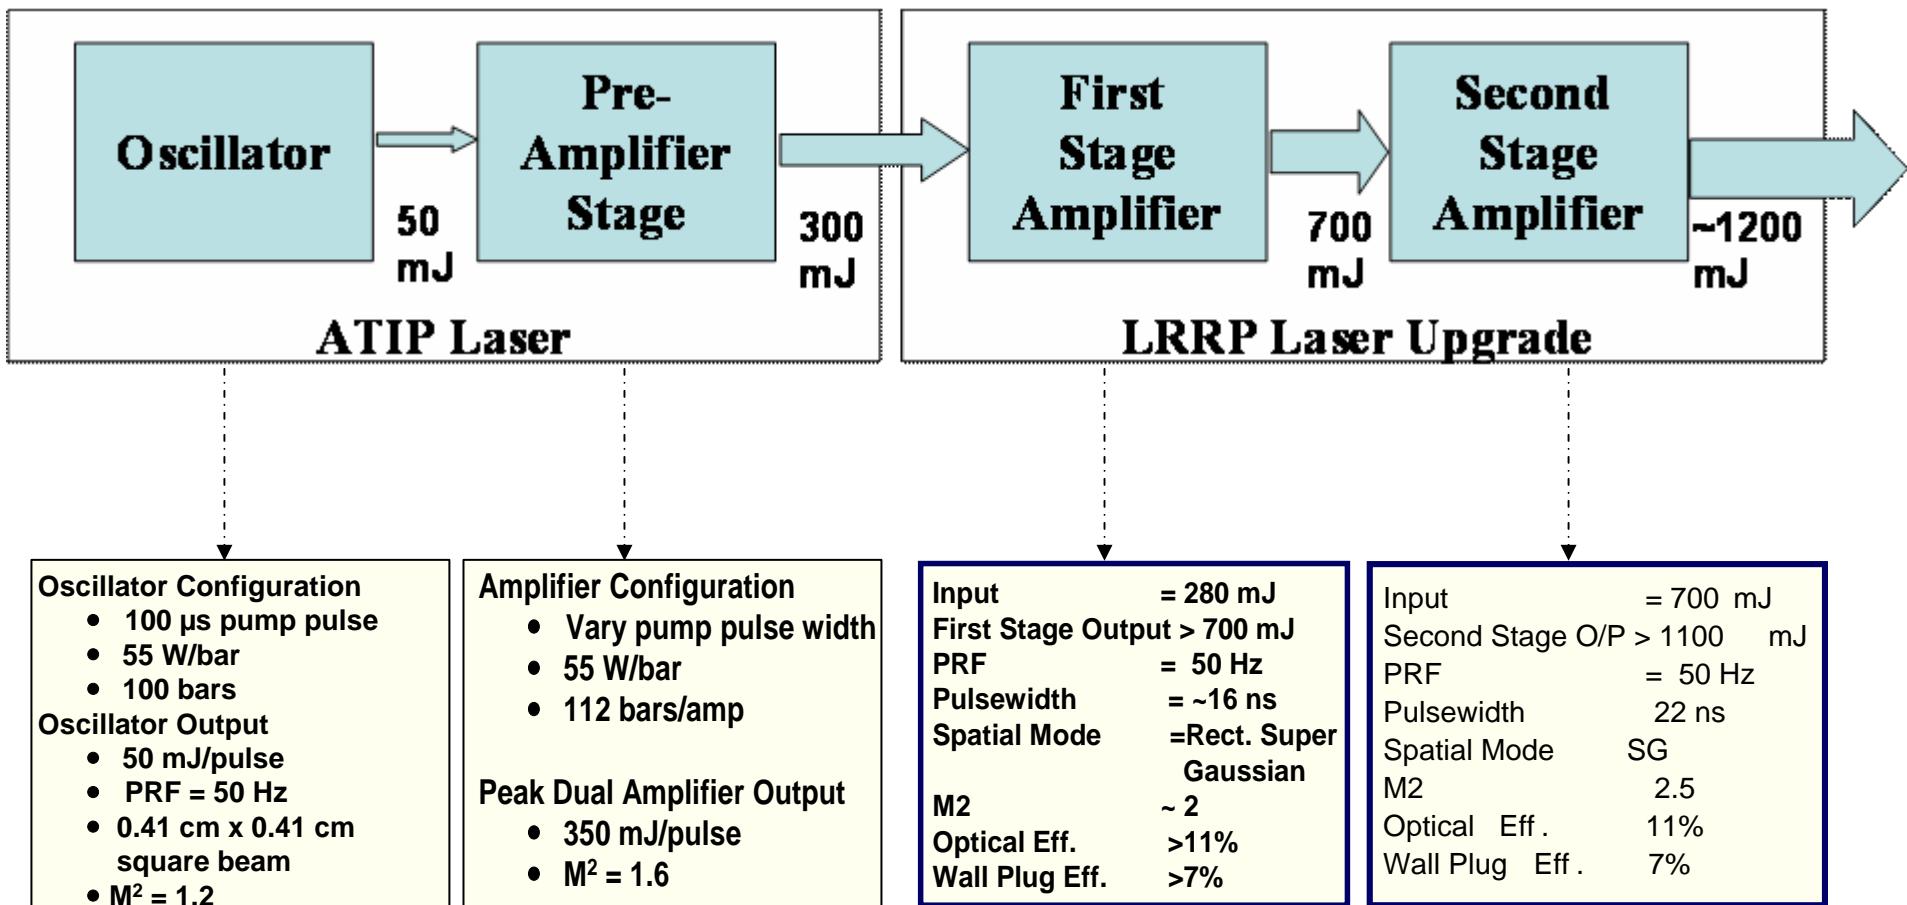





# Nd:YAG Pump Laser

## - Typical Output Characteristics -

| Parameter          | Specification                  | Goal | Design/Performance                    |
|--------------------|--------------------------------|------|---------------------------------------|
| Pulse Energy (mJ)  | 900                            | 1200 | 1040                                  |
| $M^2$              | NA                             | 2    | 2.5                                   |
| Laser head package | Single breadboard              | NA   | Single breadboard in custom enclosure |
| Cooling            | Conductive to diodes and slabs | NA   | Conductive to diodes and slabs        |
| Seeding            | Ramp & fire                    | NA   | Ramp & fire                           |
| Electronics        | Separate custom module         | NA   | Separate custom module                |

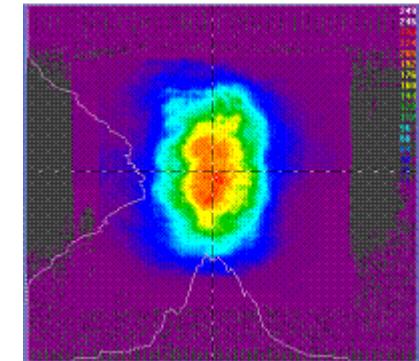

**Near field beam profile of final amplifier output**

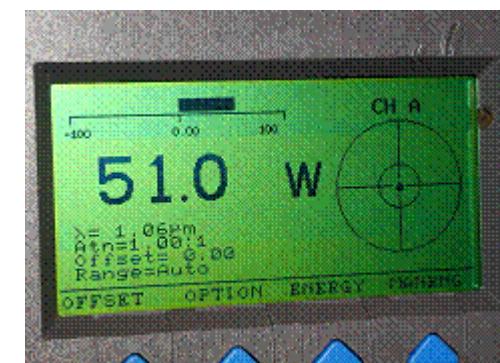


**Average power at 50 Hz of 51.0 W (1020 mJ/pulse)**

**Typical pulselength = 22 ns. Max. Pulse Energy achieved = 1.2 J. Electrical to optical efficiency >7% was achieved with only 58 W peak power per diode bar pumping the amplifiers.**




# Temporal Characteristics

Oscillator Only: 16.5 ns

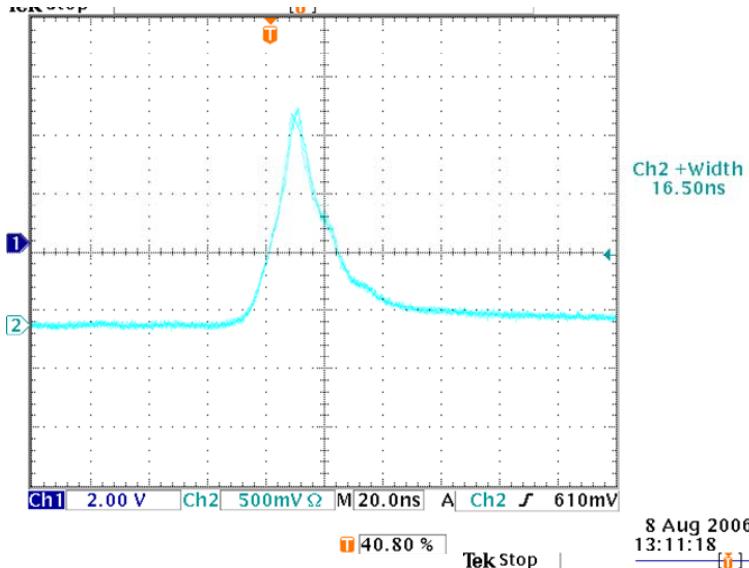

Oscillator + Preamp 1 + Preamp 2 : 19.5 ns

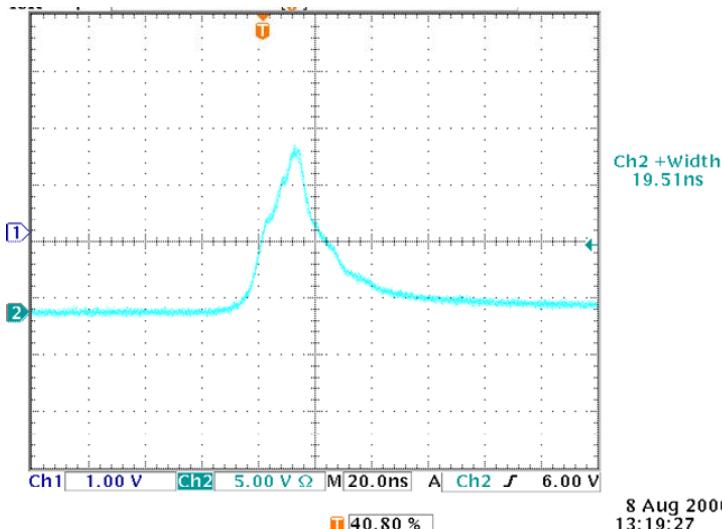

Oscillator + Amp 1 + Amp 2 : 20.9 ns


Full System:  
Pulsewidth  $\sim$  22 ns



# Full System Results Beam Quality

## 50 Hz, Full Power Beam Quality Measurements


$$M_x^2 = 2.5, M_y^2 = 2.5,$$

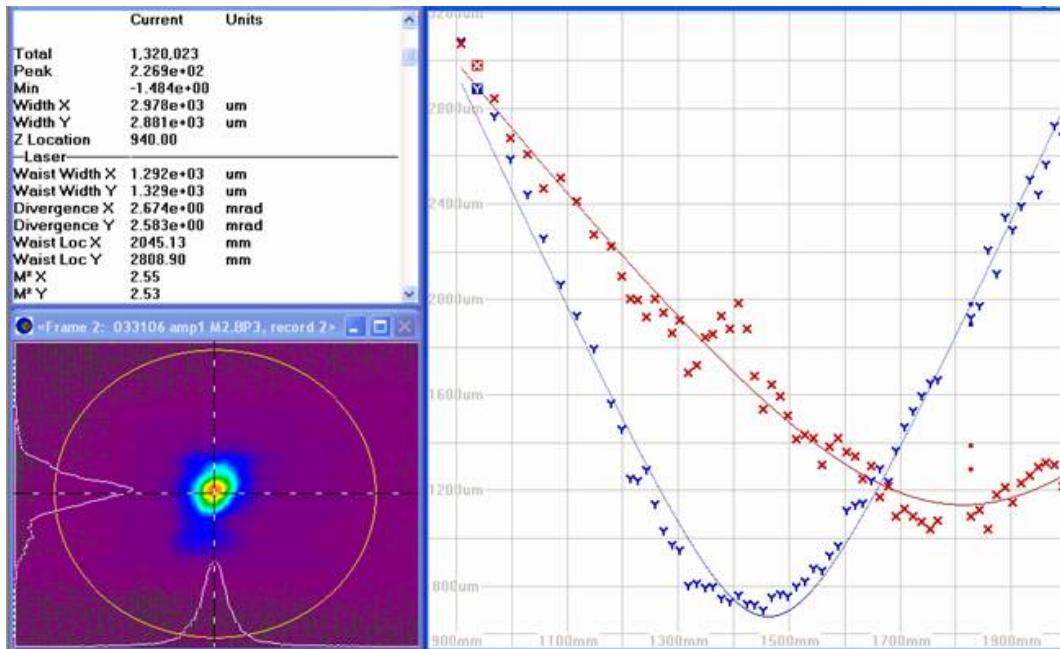

$M^2$  data



# Full Nd:YAG Laser Unit

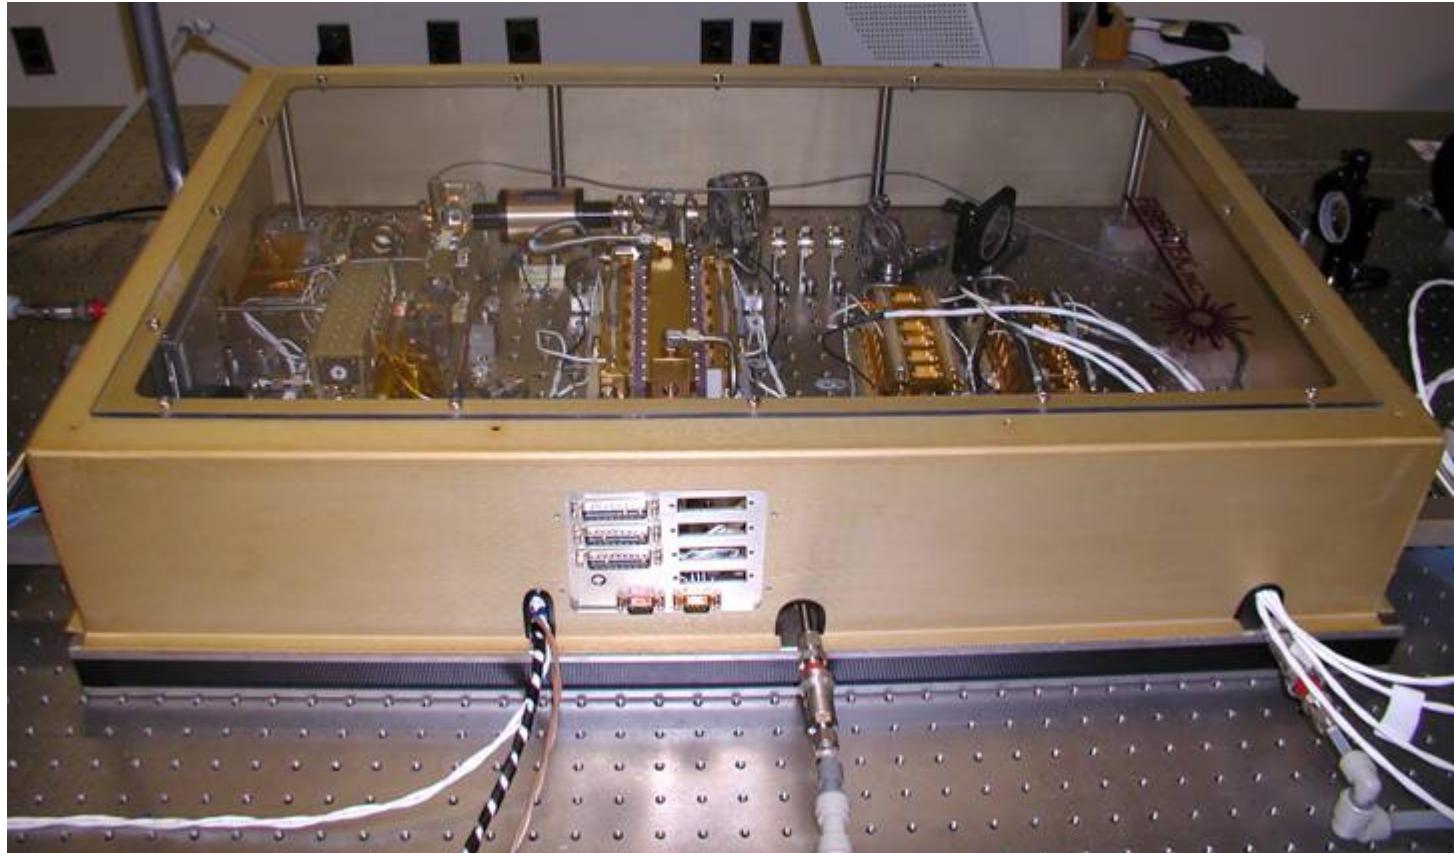

- The dimensions of this laser unit, including a SHG module, is 34" x 22" x 8"
- With latest diode bars and modified opto-mechanical components, the above package can be reduced to less than a quarter of its size



# Final System Control and Power Electronics

Custom power supplies and control electronics for the upgrade have been built

- Control electronics consists of two 19" rack mountable boxes
- All power supplies are contained in two 19" rack mountable power supply modules
- Each amplifier can be individual set between high power and low power operation to allow the user to achieve a wide range of output powers at 50 Hz




Single Power Supply Module



Control electronics



# 320 nm UV generation

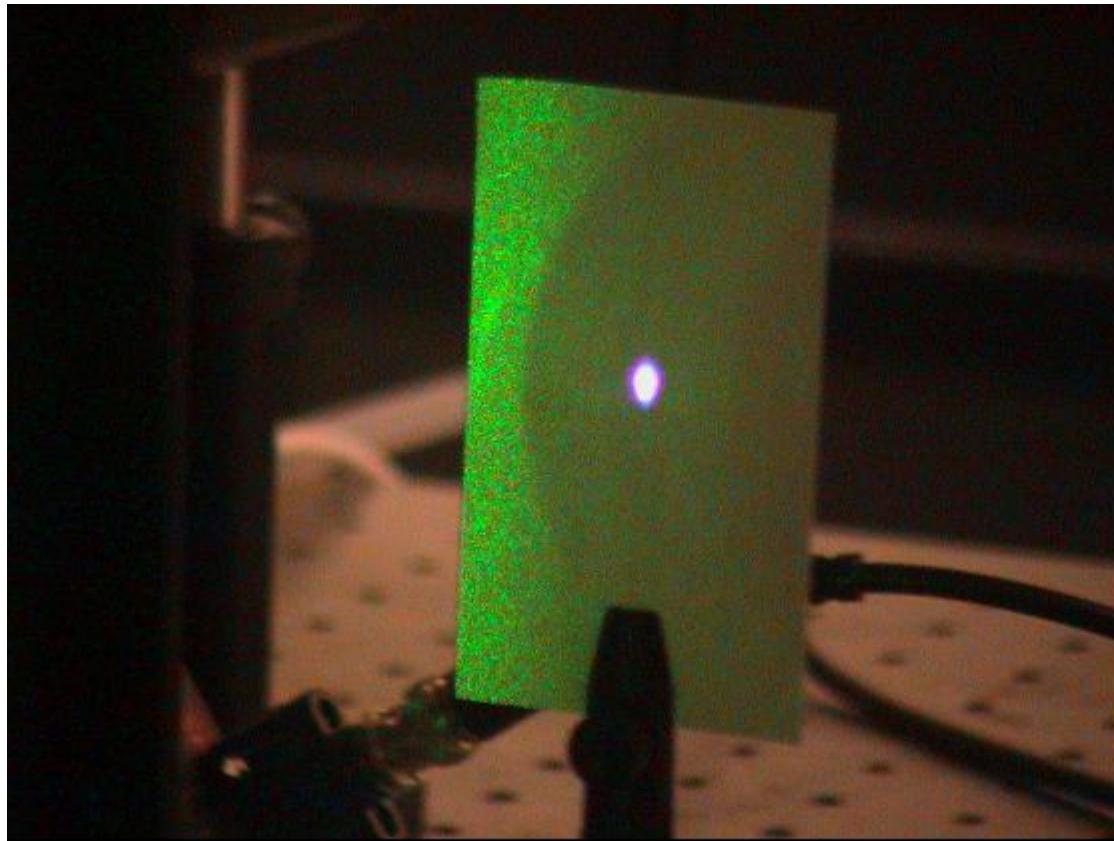

- **Currently, we are generating a few mJ with limited pump energy of 280 mJ/pulse**
  - The elliptical beam allows reduced overlap inside the nonlinear crystal of RISTRA module hence reduces the conversion efficiency




# Spatial fluence profile & RISTRA

- RISTRA OPO requires round, top-hat spatial pump profile -


**Flat pump profiles have facilitated high pump depletion  
& hence high OPO conversion efficiency**

Results Using refined Flash Lamp pump laser


OPO signal  
near-field  
spatial fluence  
profile, Fresnel  
Number > 450

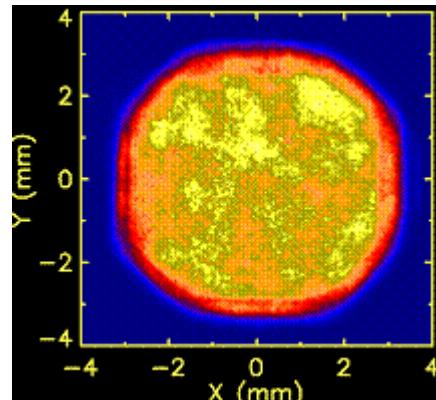


Self-seeded  
oscillation  
in two-crystal  
RISTRA  
~85% pump  
depletion

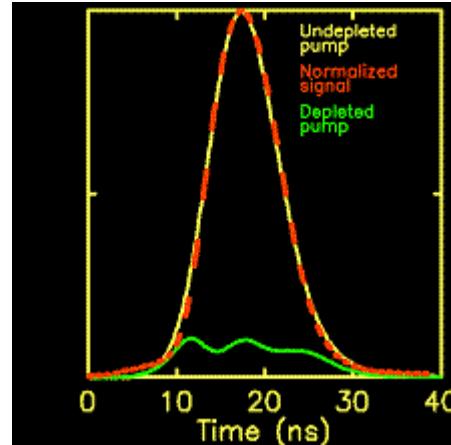

Results Using Diode pumped Nd:YAG laser

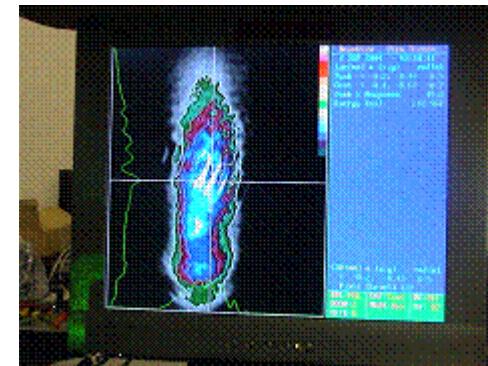

Pump  
Beam  
at the  
Big  
OPO

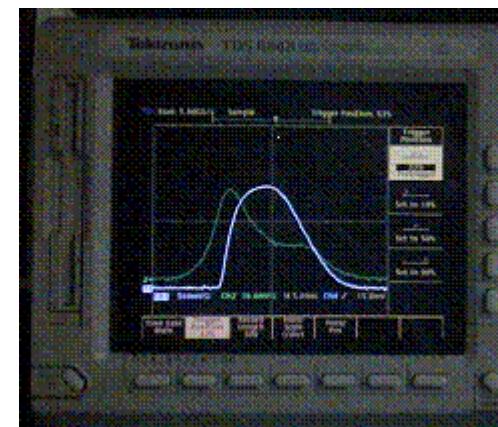


Reduced  
Pump  
Depletion



# On-Going Work

- Improve the Beam Quality of the Diode Pumped Nd:YAG Laser
  - The goal is to achieve a Round, Top Hat spatial fluence profile with wavefront aberration less than 0.5

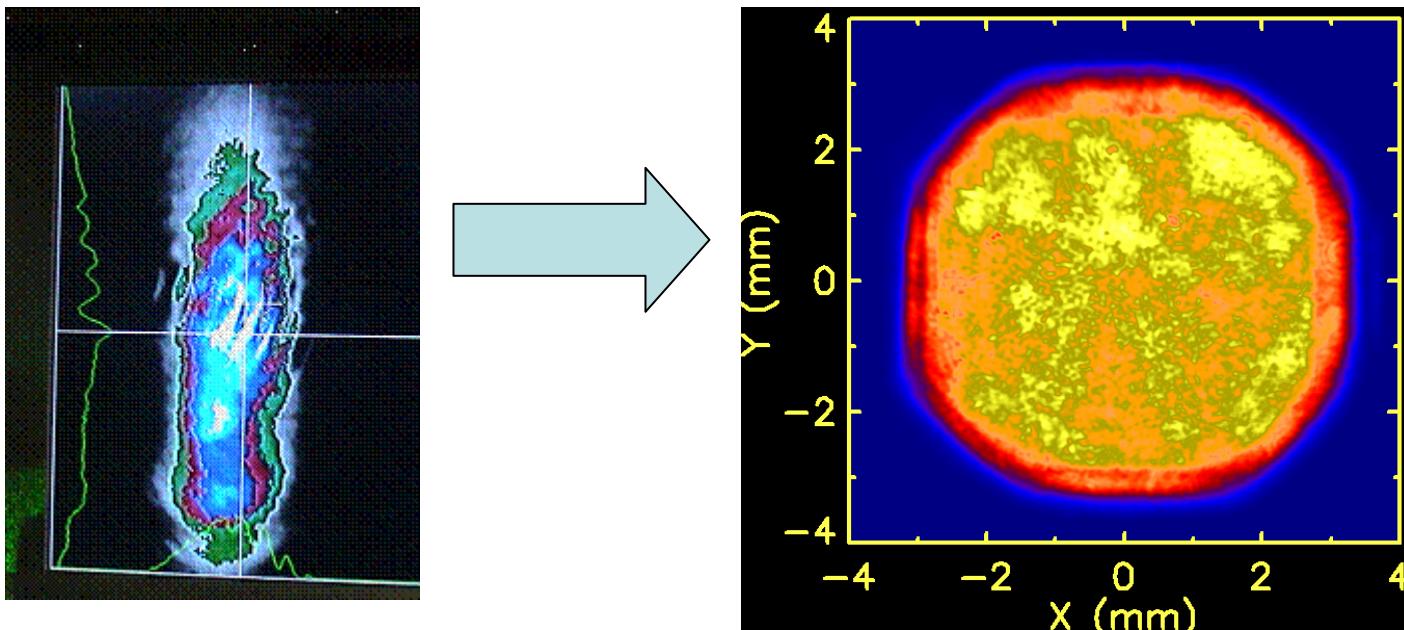

- Refinements to the ring oscillator cavity, pre amplifiers and amplifiers of the diode-pumped Nd:YAG laser to improve beam quality and reduce pulsewidth is nearing completion



# Summary and Conclusions

- A high energy, single mode, all solid-state Nd:YAG laser primarily for pumping an UV converter is developed
- Greater than 1 J/pulse at 50 HZ PRF and pulsedwidths around 22 ns have been demonstrated
- Higher energy, greater efficiency may be possible
  - Refinements are known and practical to implement
- Technology Demonstration of a highly efficient, high-pulse-energy, single mode UV wavelength generation using flash lamp pumped laser has been achieved
  - Greater than 90% pump depletion is observed
  - 190 mJ extra-cavity SFG; IR to UV efficiency  $> 21\%$  ( $> 27\%$  for 1 mJ seed)
  - 160 mJ intra-cavity SFG; IR to UV efficiency up to 24%
  - Fluence  $\leq 1 \text{ J/cm}^2$  for most beams
- The pump beam quality of the Nd:YAG pump laser is being refined to match or exceed the above UV converter results
- Currently the Nd:YAG pump laser development is a technology demonstration
  - System can be engineered for compact packaging